



INSTALLATION AND MAINTENANCE GUIDE FOR 2-PIECE STEEL BALL VALVES

I. INSTALLATION

1. Operate valve before installing. This verifies functionality.
2. Check connecting pipe threads for accuracy. Make sure the pipe threads are free of foreign materials such as scale or metal shavings.
3. To ensure proper installation, standard piping practices should be followed.
4. The NIBCO 2-piece ball valve is a bi-directional valve.

II. MAINTENANCE

1. General maintenance should consist of operating the valve periodically to ensure that it is functioning properly.
2. Routine maintenance consists of tightening the packing to compensate for wear. When leakage occurs, the packing gland follower (under handle) should be tightened in 1/8 to 1/4 turn increments just enough to stop leakage. This can be done with a thin open-ended wrench.

**NIBCO DOES NOT RECOMMEND DISASSEMBLY OF THIS VALVE TO
ATTEMPT INTERNAL REPAIRS.**